Email: support@icepurefilters.com
Web: www.icepurefilters.com
Manufacturer: TOP PURE(USA), INC.
Address: 3717 San Gabriel River Pkwy Ste A Pico Rivera, CA 90660-1400

ICEPURE®

Beverage & Wine Cooler

Model: ICP-HEWC

PRODUCT INSTRUCTION MANUAL

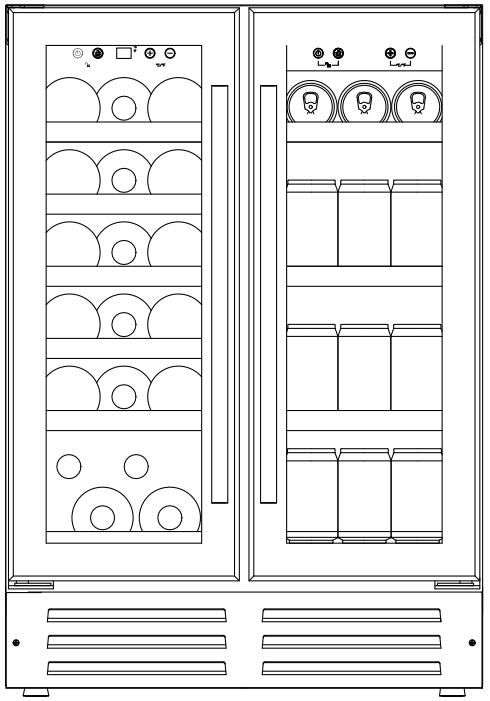

Please read this owner's manual carefully before operating the unit.

Contents

Packing List ---- 01
Important Safety Information ---- 01
Description of Appliance and Installation ---- 04
116L/4.1 Cubic Feet ---- 04
Accessory Installation before Operating ---- 05
Unpacking and Cleaning the Beverage & Wine Cooler ---- 05
Lock & Unlock the Door ---- 05
Operating the Beverage & Wine Cooler ---- 06
Working Climate ---- 06
Beverage & Wine Storage ---- 06
Control Panel ---- 07
Power ON/OFF Control ---- 08
Unlocking the Control Panel ---- 08
Interior Lighting ON/OFF Control ---- 08
Temperature Display Window ---- 09
Temperature Setting ---- 09
Selecting Fahrenheit(°F) & Celsius (°C) Display ---- 09
Care and Maintenance ---- 10
Cleaning the Beverage & Wine Cooler ---- 10
Power Failure ---- 10
Moving the Beverage & Wine Cooler ---- 10
Energy Saving Tips ---- 10
Troubleshooting ---- 11

1. Please removed all packaging, stickers and films from the products surface and clean the product's surfaces with a damp cloth and mild deturgent before using for the first time.
2. Let the appliance stand upright for approximately 24 hours before connecting it to the power source, which helps to reduce the possibility of a cooling-system malfunction from handling during transportation.

Packing List

Number	Name	Quantity
1	Wine & Beverage Cooler Machine	1
2	Door Handles	2
3	Key	1
4	Wooden Shelves	6
5	Flat Mesh Shelves	4
6	Instruction Manual	1

Important Safety Information

Before using the appliance, please properly position and install it as described in this manual. To avoid the risk of fire, electrical shock, or injury when using the appliance, follow these basic precautions:

- This appliance is for domestic purposes only and is intended to be used exclusively for the storage of sealed bottled wines and beverages.
- The appliance must be positioned so that the plug is accessible.
- Make sure the voltage/current marked on the rating label corresponds with your supply voltage. Plug into a grounded 3-pin outlet, do not remove grounding pin, do not use an adapter, and do not use an extension cord.

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

- Do not connect or disconnect the electric plug with wet hands.
- To disconnect the appliance, grip the plug and pull it from the wall outlet. Never pull out by the cord.
- It is recommended that a separate circuit, serving only your appliance be provided.
- Unplug the appliance or disconnect power before cleaning, maintenance or servicing. Failure to do so can result in electrical shock or death.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The fuse (or circuit breaker) size should be 10 amps or higher.
- This appliance can be used by children aged from 8 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- To ensure proper ventilation for the appliance, the front of the unit must be completely unobstructed. Locate the unit away from direct sunlight and sources of heat (stove, heater, radiator, etc.).
- Do not attempt to repair or replace any part of the appliance unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- Ensure enough peoples to move and install the appliance to avoid any damage to the appliance or injury to the peoples.
- It is important for the appliance to be leveled in order to work properly. You may adjust the appliance's feet to level it.

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

- Never clean the appliance parts with flammable fluids which may create a fire hazard or explosion. And do not store or use gasoline or other flammable vapors and liquids in the vicinity of the appliance.
- Do not use solvent-based cleaning agents of abrasives on the interior. These cleaners may damage or discolor the interior.
- Do not use this appliance for other than its intended purpose.
- Do not use electrical appliance inside the appliance.
- The use of attachments not recommended by the manufacturer may be hazardous.
- Please keep the products away from the fire or similar glowing substance before you dispose the appliance.
- GWP(Global Warming Potential): R600a=3
- When you dispose the appliance, take off the door and leave the shelves in place so that children may not easily climb inside. And make sure the coolant circuit, particularly the heat exchanger at the back/bottom of the unit is not be damaged.
- The recycle symbol on the product or its packaging indicates that this product is not to be handled as normal household waste and it is to be taken to a recycling collection point for electrical and electronic goods.

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

Description of Appliance and Installation

The following pictures only show description of appliance. The dimension and shelf quantity may differ among the models of the same series.

116L/4.1 Cubic Feet

Wine Zone: 19 Bottles Beverage Zone: 58 Cans

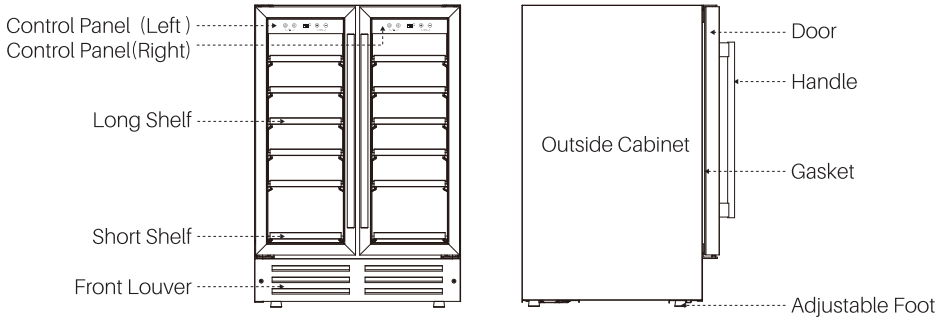

Height Adjustable: 870-890mm / 34.3-35.0inch

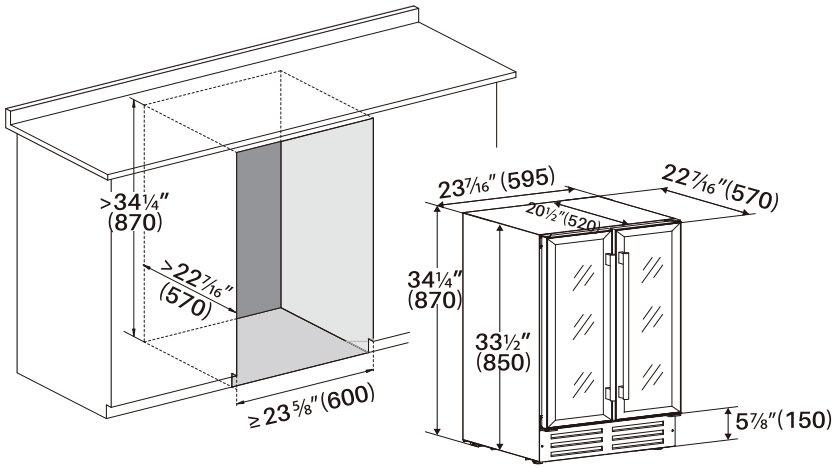

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

Accessory Installation before Operating

Unpacking and Cleaning the Beverage & Wine Cooler

Remove the exterior and interior packing materials.

1. Let the appliance stand upright for approximately 24 hours before connecting it to the power source, which helps to reduce the possibility of a cooling-system malfunction from handling during transportation.
2. Use a soft cloth to clean the interior surface with lukewarm water.
3. Install the door handle provided with the appliance by following these steps:

STEP 1: Gently pull the door Gasket to one side to reveal the two Handle Screws and Washers pre-placed .

STEP 2: Fix Handle by screwing the two Handle Screws tightly.

STEP 3: Restore the Gasket.

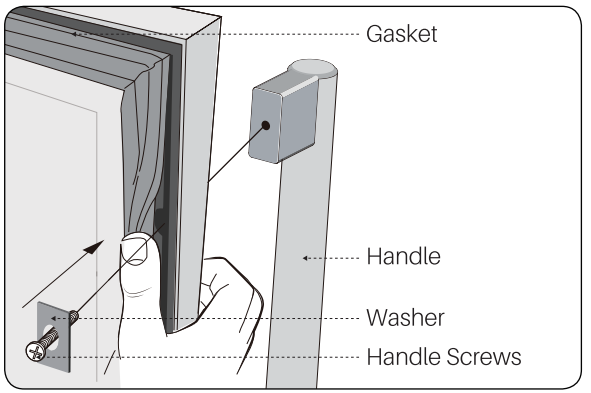

Lock & Unlock the Door

1. This beverage and wine cooler features a locking function, a key is included in the package.
2. Insert the key into the lock and turn it counter-clockwise to unlock the door. To lock it, please turn clockwise. Please save the key well.

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

Operating the Beverage & Wine Cooler

Working Climate

1. The appliance is designed for operating from SN to N climate (see below climate class chart). It is recommended to maintain the ambient around 22-25°C (71.6°F-77°F) which helps the appliance working with low power consumption.

Climate Class	Ambient Temperature
SN	10 - 32 °C (50°F-90°F)
N	16 - 32 °C (61°F-90°F)
ST	18 - 38 °C (64°F-100°F)
T	18 - 43 °C (64°F-109°F)

2. If the ambient temperature is above or below the designed climate range, the performance of the unit may be affected. For example, the appliance operating in extreme cold or hot conditions may cause interior temperatures to fluctuate, and the temperature set 5-22°C may not be reached sometimes.

Beverage & Wine Storage

1. The standard wooden shelves are ideal for storing Bordeaux bottles, while the flat mesh shelves are perfect for beverages. The maximum capacity may vary depending on the size or dimensions of the items stored.
2. The shelves can be pulled out by 1/3 approximately for easy access to the beverage and wine storage. There are two designs for the pull-out shelves:
   a. The shelves are without telescopic rails, but with a plastic Stopper on each sides of the shelf track to prevent bottles from falling.
   b. The shelves are with Telescopic Rails which has stoppers by themselves.

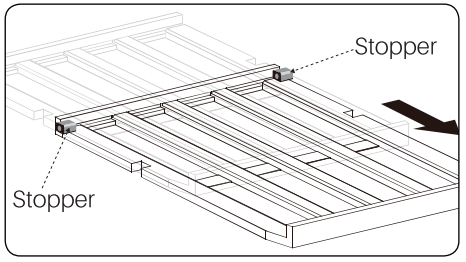

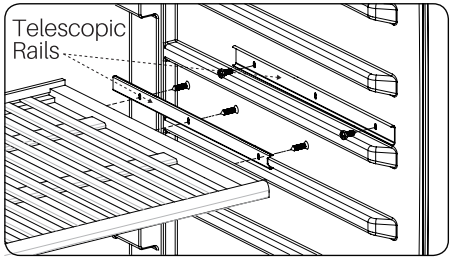

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

3. To prevent damaging the door gasket, make sure to have the door opened fully all the way before pulling the shelves out.
4. Please store drinks in sealed bottles.
5. Do not cover the shelves with aluminum foil or any other shelf material which may prevent air circulation.
6. Should the beverage & wine cooler be left empty for long periods it is suggested that the appliance is unplugged, and after careful cleaning, leave the door ajar to allow air to circulate inside the cabinet in order to avoid possible condensation, mold or odours forming.
7. Recommended temperatures for chilling/storing your wines.

Wine Type	Recommender Temp
Red Wines	15-18 °C (59°F-64°F)
Dry/White Wines	9-14 °C (48°F-57°F)
Rose Wines	10-11 °C (50°F-52°F)
Sparkling Wines	5-8 °C (41°F-46°F)

Control Panel

For Left and Right Zone

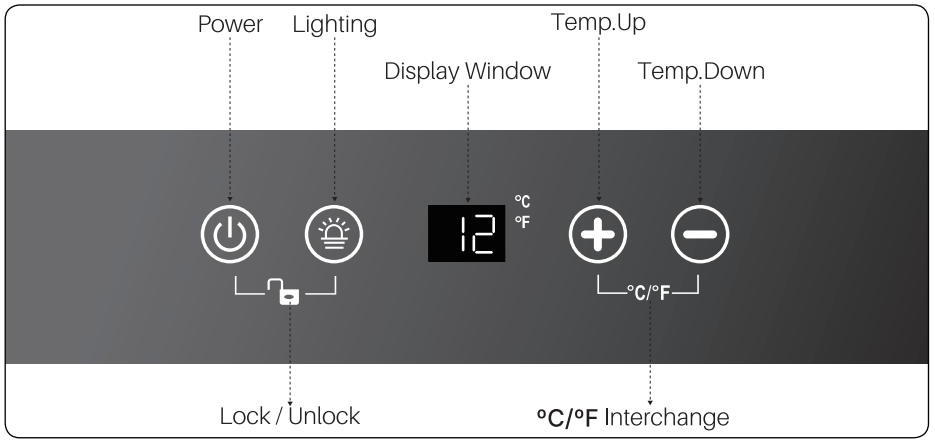

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

Power ON/OFF Control

For Left and Right Zone

1. When the appliance is plugged in to a power outlet, it powers on automatically.
2. The power of **Left and Right Zone** will be turn off/on **at the same time** by Keep pressing the power mark ⏻ on Left or Right Zone for **10 seconds**
3. No matter the Cntrol Panel is locked or unlocked, you can turn off the power of **Left and Right Zone at the same time** by keep pressing the power mark ⏻ on Left or Right Zone for **10 seconds**.

WARNING: To avoid damaging the compressor, please do not turn on the appliance again within 5 minutes after you turn it off.

Unlocking the Control Panel

For Left and Right Zone

1. To unlock the control panel, touch the power mark and lighting mark ⏻ 💡 with 2 fingers at the same time and hold for **3 seconds** . When unlocked a buzz sound will be heard.
2. To lock the beverage & wine cooler by simultaneously pressing and holding the Power and Light button for **5 seconds**. You will hear an audible beep and the control panel will either lock.
3. Under the locked situation, the control panel will not react to any touching order for Lighting On/Off and Temperature Setting.

Interior Lighting ON/OFF Control

For Left and Right Zone

1. Under the unlocked situation, touch the lighting mark 💡 to turn on (or turn off) the interior cool LED lighting.
2. The lighting will stay on unstil it is manually turned off.

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

Temperature Display Window

For Left and Right Zone

1. The temperature is displayed in digital which is the best way to be read out. The digital is shown as the set temperature when you are setting the temperature, and it will change to be the real temperature of the inside cabinet after **10 seconds** without being touched.
2. When the temperature probe is out of order, the display window will show with "HH" or "LL" instead of a digital figure while continuous buzz sound will be heard. In case of this happens, this appliance is considerately designed to keep periodical running of compressor and fans which helps to keep the coldness of the inside cabinet to protect your stored wines.

WARNING: To avoid destroying your stored wines, it is strongly recommended to have the appliance repaired immediately, as the spare periodical running can not ensure the appliance to achieve the temperature you have set.

Temperature Setting

For Left and Right Zone

1. The temperature setting range is 5-22°C/2-22°C (41-72°F/36-72°F).
2. Directly touch the ⊕ or ⊖ mark to set the beverage & wine cooler temperature as you want.
3. The first touch on ⊕ or ⊖ mark will recall the previous set temperature displayed.
4. Touch the mark ⊕ to increase the set temperature by 1°C (or by 1°F). On the contrary, touch the mark ⊖ to decrease the set temperature by 1°C (or by 1°F).
5. The digital will change to display the real temperature of the inside cabinet after **10 seconds** without being touched.

NOTE: For the first time to use the appliance or to restart the appliance after having been shut off for a long time, you may find a few degrees variance between the set temperature and the displayed temperature. It will be normal after a few hours running.

Selecting Fahrenheit(°F) & Celsius (°C) Display

For Left and Right Zone

The Fahrenheit and Celsius display of the **Left and Right Zone** can be interchanged **at the same time** by keep pressing the marks ⊕ ⊖ °C/°F on Left or Right Zone with 2 fingers simultaneously for **5 seconds**.

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

Care and Maintenance

Cleaning the Beverage & Wine Cooler

1. Turn off the power, unplug the appliance, and remove all items including shelves.
2. Wipe the inside surfaces with a sponge and baking soda solution. The solution should be about 2 tablespoons of baking soda to 1 quart (approx. 1 litre) of warm water.
3. Wash the shelves with a mild detergent solution. Allow shelves to dry before placing back into the cooler.
4. Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.
5. Wipe the outside cabinet with warm water and mild liquid detergent. Wipe dry with a clean soft cloth.
6. Do not use steel wool or steel brush on the stainless steel. These will scratch the stainless steel with steel particles and rusting may occur.

Power Failure

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of door openings. If the power is going to be off for a longer period of time, you need to take the proper steps to protect your drinks.

Moving the Beverage & Wine Cooler

1. Remove all items.
2. Securely tape down all loose items (shelves) inside your appliance.
3. Turn the adjustable leg up to the base to avoid damage.
4. Tape the door shut.
5. Be sure the appliance stays secure in the upright position during transportation. Also protect outside of appliance with a blanket, or similar item.

Energy Saving Tips

1. The appliance should be located away from heat producing appliances, and away from direct sunlight.
2. Ensure that the unit is adequately ventilated. Never cover air vents.
3. Only open the door when necessary. Avoid leaving the door open for long periods or opening/closing the door frequently.

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

Troubleshooting

If you feel the appliance is not working properly, follow these instructions to try to see if you can solve the problem simply by yourself before calling for service.

No.	Problem	Problem Possible Cause / Measure
1	The cooler does not operate	Not plugged in. The appliance is turned off. The circuit breaker tripped or a blown fuse.
2	The cooler is not cold enough	Check the temperature control setting. External environment may require a higher setting. The door is opened too frequently. The door is not closed completely. The door gasket does not seal properly.
3	Automatically turn-on and turn-off frequently	The room temperature is hotter than normal. A large amount of contents has been added to the cooler. The door is opened too frequently. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly.
4	The lighting does not work	Not plugged in. The circuit breaker tripped or a blown fuse. The lighting is turned off.
5	Too much vibration	Check to assure that the appliance is level. Check to assure no parts inside the cabinet or in the compressor chamber are loose.
6	The cooler seems to make too much noise	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant. Contraction and expansion of the inside walls may cause popping and crackling noises. The appliance is not level.
7	The door will not close properly.	The cooler is not level. The door was reversed and not properly installed. The gasket is dirty. The shelves are out of position.
8	The display window is shown with “HH” or “LL” instead of a digital figure, and/or with continuous buzz sound.	The temperature probe is out of order.

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved