Email: support@icepurefilters.com
Web: www.icepurefilters.com
Manufacturer: TOP PURE(USA), INC.
Address: 3717 San Gabriel River Pkwy Ste A Pico Rivera, CA 90660-1400

ICEPURE®

3-IN-1 WATER DISPENSER WITH ICE MAKER

Model: HZB-15YLR

PRODUCT INSTRUCTION MANUAL

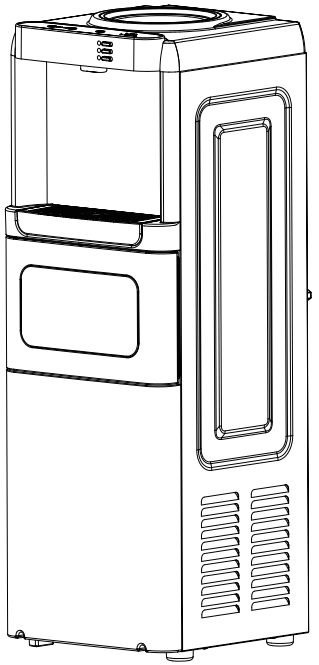

Please read this owner's manual carefully before operating the unit.

Contents

1. Important Safety Information ---- 01
2. Safety Instructions ---- 03
3. Certification ---- 04
4. Getting to Know Your Unit ---- 05
5. Start to Operate Your Unit ---- 07
6. Care and Cleaning ---- 08
7. Using Your Unit ---- 09
8. Product Specifications ---- 11
9. Trouble Shooting Guide ---- 12
10. After-sales Service ---- 13

1 Important Safety Information

When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock, and injury to persons or property.
Read all instructions before using any appliance.

- Do not operate this， or any other appliance with a damaged cord. Connect to properly polarized outlets only. No other appliance should be plugged into the same outlet. Be sure that the plug is fully inserted into the receptacle.
- Do not run the power cord over carpeting or other heat insulators. Do not cover the cord. Keep cord away from traffic areas, and do not submerge in water.
- We do not recommend the use of an extension cord, as it may overheat and become a risk of fire. If you must use an extension cord, use No.14 AWG minimum size and rated no less than 1875 watts.
- If the unit is brought in from outside in wintertime, give it a few hours to warm up to room temperature before plugging it in.
- Do not let hot water touch bare skin. Exercise caution and use reasonable supervision when appliance is used near children.
- Do not use your unit outdoors. Locate the unit at a even or flat surface, to avoid a hazard due to instability of the appliance.
- And place the unit away from direct sunlight and make sure that there is at least 2 inches of space between the back of your unit and wall. Keep a minimum distance of 4 inches on each side of your unit free.
- Do not tip over the unit.
- Do not use other liquid to make the ice-cube or dispense the cold drink other than water.
- Always turn off the unit and unplug when there is no water left in the bottle or when you are changing the bottle. Turn it back on after a new bottle has been placed and the air is purged from water taps.
- Unplug the unit before cleaning or making any repairs or servicing.

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

- Do not clean the unit with flammable fluids. The fumes can create a fire hazard or explosion.
- Disconnect the mains plug from the supply the supply socket when not in use or you go to have the travel for the holiday, where supply connection is via mains plug.
- **WARNING:** Do not damage the refrigerant circuit.
- **WARNING:** Children should be supervised to ensure that they do not play with the appliance.
- **WARNING:** This appliance must be earthed. And use the 110-120V/60Hz earthed power supply.

DANGER: Risk of Fire or Explosion. Flammable refrigerant used. Do not use mechanical devices to defrost ice maker. Do not puncture refrigerant tubing.
DANGER: Risk of Fire or Explosion. Flammable Refrigerant Used. To Be Repaired Only By Trained Service Personnel. Do Not Puncture Refrigerant Tubing.
CAUTION: Risk of Fire or Explosion. Flammable refrigerant used. Consult repair manual/owner's guide before attempting to install or service this product. All safety precautions must be followed.
CAUTION: Risk of Fire or Explosion. Dispose of property in accordance with federal or local regulations. Flammable refrigerant used .
CAUTION: Risk of Fire or Explosion due to puncture of refrigerant tubing; Follow handling instructions carefully. Flammable refrigerant used.

The ice maker should be installed in accordance with the safety standard for Refrigeration Systems, ASHRAE15. The ice maker shall not be installed in corridors or hallways of public buildings. If the unit is with problem need to be maintained, that replacing with like components and that servicing shall be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service.

IMPORTANT:
The wires in this mains lead are colored in accordance with the following code:
Green or Green with a strip yellow: Grounding
White: Neutral
Black: Live
WARNING: Fill with potable water only

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

2 Safety Instructions

This appliance must be plugged into at least a 15 AMP 110-115 VOLT 60 Hz GROUNDED OUTLET. This appliance must be grounded. It is equipped with a 3-wire cord having a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING!

Improper use of grounded wire can result in the risk of electric shock. Consult a physician if necessary. Do not attempt to defeat this safety feature by modifying the plug.

Avoid the use of an extension cord because it may overheat and cause a risk of fire. However, if it is necessary to use an extension cord:
A. Use only 3-wire extension cords with 3-blade grounding plug.
B. The marked rating of an extension cord must be be equal to or greater than the rating of this appliance.
Attempting any maintenance or cleaning:
To minimize the possibility of electric shock, unplug this appliance from the power suply or disconnect at the household distribution panel by removing the fuse or switching off the circuit breaker before attempting any maintenance or cleaning.

WARNING:

IMPORTANT NOTICE: Use Only Water
We want to ensure the safe and eicient operation of your ice maker. Please be aware that this appliance is designed for one specific purpose – to make ice from water. Do not use any beverages, liquids, or substances other than water in this ice maker. Using anything other than water may lead to damage, malfunctions, and potentially hazardous situations therefore voiding your warranty.
Why Use Only Water:
1.**Safety:** Introducing beverages or non-water substances can result in chemical reactions or build-up that could pose safety risks.
2.**Performance:** Using water ensures that your ice maker functions as intended, producing clean and odorless ice cubes.
3.**Durability:** Water is the only liquid that will not corrode or damage the internal components of your ice maker, preserving its lifespan.

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

Consequences of Using Beverages:

-**Damage:** Non-water substances can corrode, clog, or damage the internal components, resulting in costly repairs or replacement.

-**Health Concerns:** Using beverages may introduce contaminants into the ice-making process, potentially impacting the safety of the ice produced.

-**Voided Warranty:** Using beverages or non-water substances may void your appliance's warranty, leaving you responsible for any repair or replacement costs. To ensure the longevity and reliability of your ice maker, always follow these guidelines strictly. Only use clean, potable water in your ice maker to guarantee safe and refreshing ice for all your beverage needs.

If you have any questions or concerns regarding the proper usage of your ice maker, please refer to the user manual or contact our customer support for assistance.

3 Certification

Intertek
3149457

Conforms to UL STD. 563 and UL399
Certified to CSA STD. C22.2 No.120

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

4 Getting to Know Your Unit

General instruction

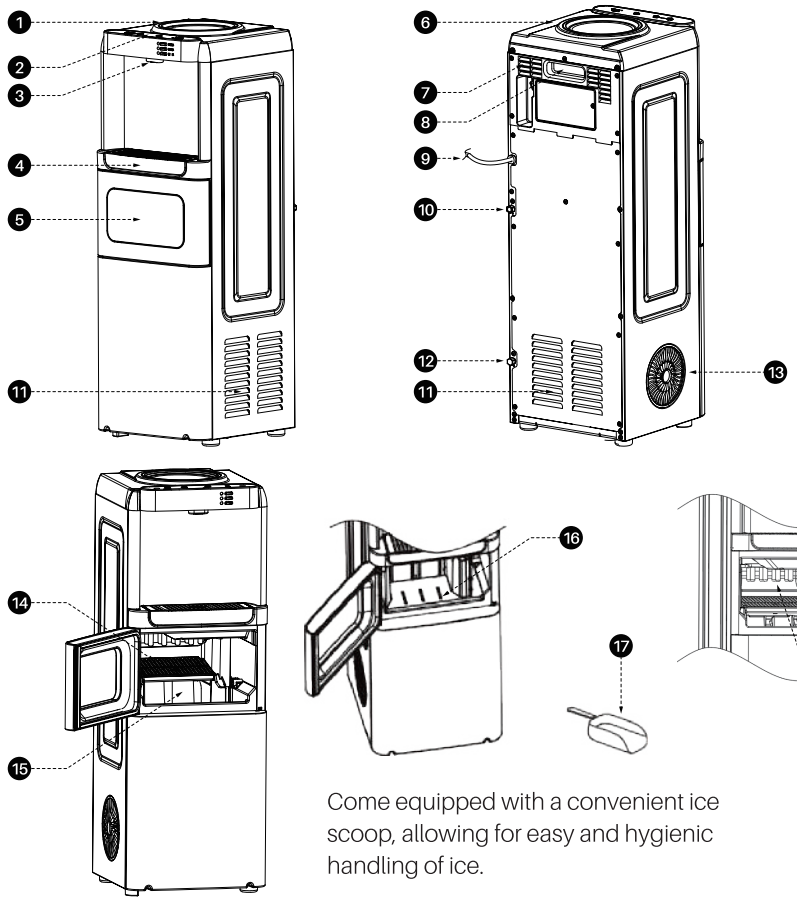

Come equipped with a convenient ice scoop, allowing for easy and hygienic handling of ice.

1. Water bucket storage area
2. Control panel
3. Water outlet
4. Detachable water tray
5. Ice storage box door
6. Top cover
7. Heat dissipation hole
8. Handle
9. Power Cord
10. Hot bile drainage outlet
11. Air inlet
12. Cold water tank drain outlet
13. Air outlet
14. Return water plate component
15. Cold water tank
16. Ice partition
17. Ice scoop
18. Ice-making box

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

Position of control panel & function

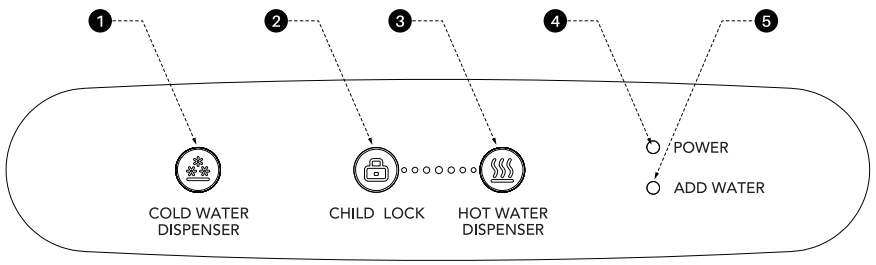

1. Cold water button
2. Child lock button
3. Hot water button
4. Power indicator
5. Water shortage indicator

When lack of water, the “ADD WATER” indicator light will be red.

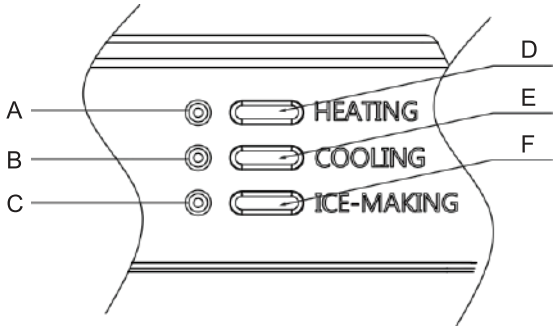

A. Heating water indicator light
B. Cooling water indicator light
C. Ice making indicator light
D. Heating button
E. Cooling button
F. Ice making button

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

5 Start to Operate Your Unit

Unpacking the unit

- Removing the package, do not turn the unit upside down, or lay it on its side.
  a. Remove the strapping.
  b. Open the cartoon box.
  c. Pull the unit straight up from the box.
  d. Remove the plastic bag.
  e. Remove the Styrofoam packing from the box, including pearl cotton on the evaporator.
  f. Check if there is a water tray, ice scoop and shock silicon pad, if any accessories are missing please contact the customer service department.

  The shock silicon pad can efectively reduce the sound of ice falling onto the partition, and customers can place the shock silicon pad on the partition themselves. The refrigeration compressor has very sensitive mounts inside of its welded shell in order to provide quiet running. Improper handling may damage the compressor

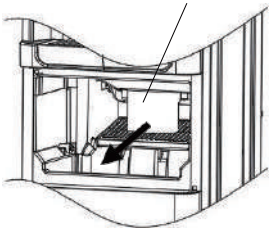

- Wipe it clean if necessary.
- Place the unit on the hard and flat ground. Pay attention to put it evenly and moderately. The location should be far away from direct sunlight and other source of heat.
- Please locate the unit at the place which have the good air circulation condition. And make sure that there are at least 6.3 inches on both sides and between the back of unit and the wall. And far away from high temperature surrounding and prevent it from being exposed in the sunlight.
- The appliance must be positioned so that the plug is accessible.
- Fasten the drain cap tightly at the back of the unit before start to run the unit. Because during the shipping process, it maybe has loosed. When you not fasten it again, it will cause the water leakage and make your floor wet.
- Do not plug the power cord into the power socket yet! Read the instructions first. This unit is for indoor use only. Room temperature should not exceed 97°F.

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

6 Care and Cleaning

Before using your unit, it is strongly recommended to clean it thoroughly.

- Anticlockwise rotate and remove the barreled water seat, scrub the inner tank with warm water. Remove the return water plate component and clean the inner compartment of ice storage box with warm water and a soft cloth.

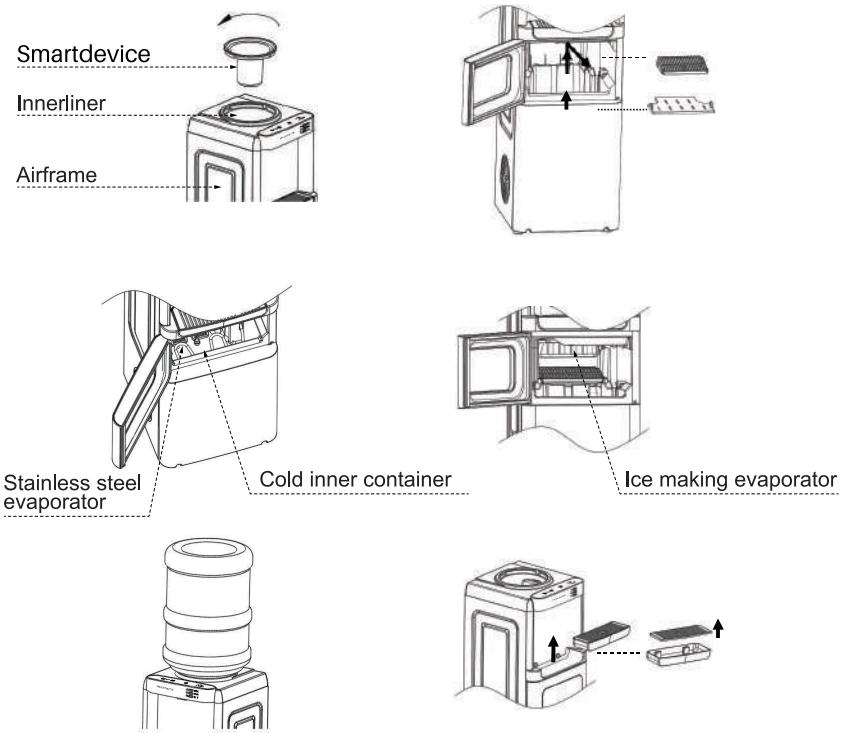

- Clean the stainless steel evaporator inside the cold bladder and the ice making evaporator column inside the ice storage box with water or alcohol.
- Add water from the top of the inner tank and the ice storage box, and clean the inner tank with diluted cleaning agent, warm water, and a soft cloth.
- After cleaning thoroughly, anticlockwise open the drain nut on the drain outlets, open the drain plug to drain the water from the inner tank and the ice storage box, clean it several times repeatedly, and then reinstall the drain plug and drain nut.

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

- The exterior of the machine should be frequently cleaned with diluted cleaning agents and warm water.
- After the machine is cleaned, place a clean water bucket containing drinkable water on top of the machine (as shown in the picture above).
- During the use of the machine, after the water tray is full, it can be disassembled, the waste water inside can be poured out, and cleaned.

When the machine is not in use for a long time, the water in the machine should be drained and the inside of the machine should be wiped dry.

7 Using Your Unit

Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged please call our customer service.

- Make sure that the unit is not plugged into the main electrical outlet.
- Before placing drinkable water bottle on the unit, be sure that the drain cap on the back is tightly fastened.
- Hold the water bottle vertically and upside down (over the smart device) and place the water bottle into the smart device receptacle. Apply slightly pressure in order to pierce the bottle cap with the spigot. This unit accepts two, three or five gallons water bottle with pierceable sealed caps.
- If the unit is brought in from outside in winter time, give it a few hours to warm up to room temperature before plugging it in.

DANGER: This unit should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which mates with standard three prong wall outlets to minimize the possibility of electric shock.
Plug your appliance into an exclusive, properly installed, grounded wall outlet. Do not under any circumstances, cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician.
This appliance requires a standard 110-115 volt, 60Hz electrical outlet with three-prong ground.
After plugging in the main power outlet, the POWER indicator on the control panel will be on. Then you can start to operate the hot water, cold water and ice-making function as your desired.

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

Hot water operation

Press the "HEATING " button, the corresponding heating indicator light(white) will light up, the hot water function will be turned on, and the hot water production time is generally around 15 minutes (depending on the added water temperature); when the heating indicator light(green) is constantly on, the water temperature has reached the set requirement (190°F-203°F).

Cold water operation

Press the "COOLING" button, the corresponding cooling indicator light(white) will light up, the cold water function will be turned on, and the cold water time is generally around 20 minutes (depending on the added water temperature and ambient temperature); when cooling indicator light(green) is constantly on, the water temperature has reached the set requirement (≤ 47°F).

Ice-making operation

Press the "ICE-MAKING" button, the corresponding ice making indicator light(white) will light up, the ice making function will be turned on, and the ice making time is generally around 7 minutes per time (depending on the added water temperature and ambient temperature); When the ice making indicator light(green) is constantly on, it indicates that the ice storage basket is full. Remove the ice cubes from the box and restart the ice making process.

Cold water and ice-making operation

Press the "COOLING" and "ICE-MAKING" buttons, the corresponding two indicator light(white) will light up, the function will be turned on, and the cold water and ice making buttons will be turned on at the same time. The ice making work will be prioritized. After making ice, if the cold water temperature does not reach the set temperature, enter the cold water mode again.

How to get the hot water

Click the child lock button, and the child lock light will turn off Within 3 seconds, click the "HOT WATER DISPENSE "button, and the hot water indicator light will remain on. The water outlet will start to produce hot water, with a single output of about 2 minutes. During the hot water process, you can click the hot water button again to end the hot water supply and turn off the indicator light.

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

How to get the cold water

Click the cold water button, the cold water indicator light will remain on, and the water outlet will start to discharge cold water. The amount of cold water discharged per time is about 2 minutes. During the process of cooling water, you can click the cold water button again to end the cold water process and turn off the indicator light.

How to get the ice

Open the ice storage box door, use an ice spoon to remove ice and place them in the container you have prepared. After removing the ice, close the door.

8 Product Specifications

Model	HZB-15YLR
Input Voltage	115V~60Hz
Unit Dimensions (in.)	11.4*11.9*32.9
Net Weight	28.6LBS/13.0kg
Ice-Making Capacity (lbs/24H) (77°F ambient temperature, 59°F water temperature)	33lbs
Ice-Making Amount Per Time	9PCS
Hot Water	190°F-203°F, 4L/H
Hot Water Outlet Flow	1.2L/MIN
Cold Water	≤47°F, 4L/H
Cold Water Outlet Flow	1L/MIN
Ice Shape	Bullet
Max Ice Storage Capacity (lbs)	2.65
Cold Water Tank Capacity (L)	1.2
Hot Water Tank Capacity (L)	0.8
Refrigerant Charge	R290/30g

WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
WARNING: Do not damage the refrigerant circuit.

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

9 Trouble Shooting Guide

Problem	Possible Cause	Solution
“ADD WATER” indicator light turns on.	Lack of water	Replace the drinking water bucket
"ICE-MAKING" indicator light turns green.	1.Too many ice cubes in the refrigerator 2.The ice full sensor is broken, and the ice full light is constantly on without ice.	1.Remove the ice cubes from the refrigerator 2.After pressing the “ICE -MAKING” button for more than 5 seconds, the ice maker can be forcibly turned on and run for 10 cycles, or contact the manufacturer to replace the sensor.
“POWER” indicator light flashes.	The ice-making box in the ice storage box is stuck.	If the ice block gets stuck in the ice-making box, remove the ice block otherwise, please consult the after-sales service personnel.
Ice are connected together.	The ice making cycle time is too long too much immersion of the evaporator into the ice making box.	Stop ice making, wait for the ice cubes to melt, and restart ice making adjust the evaporator.
	The water temperature inside the water tank is too low.	Replace the water in the water tank. The water temperature should ideally be between 46°F and 90°F.
The ice making process is normal, but no ice.	The ambient temperature or water temperature is too high.	Please make ice when the ambient temperature is below 90°F and add a certain amount of cold water to the water tank.
	Refrigeration system leakage.	Contact after-sales service personnel.
	Blockage of refrigeration system.	Contact after-sales service personnel.

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved

12 After-sales Service

Warranty:

This product comes with a one-year warranty, from the date of purchase.
The warranty of our product covers defects in materials and workmanship. During the warranty period, we will replace or repair any defective parts if the product has not been tampered with, altered, lacked regular maintenance, or misused after delivery.
The cost of repair or replacement under those excluded circumstances shall be borne by the consumer.

Please scan to contact us on Amazon

After-sales Email: support@icepurefilters.com
Offical Website: www.icepurefilters.com

Copyright©2021-2030 ICEPURE® Water Treatment, All Rights Reserved
http://www.icepurefilters.com/ ICEPURE® All Rights Reserved